SureCross Interface Relay Box IB6RP



18 to 26V dc inputs with isolated relay output

Features



- Easy-to-use interface box to electrically isolate sensor outputs
- · Accepts up to 6 discrete PNP sourcing outputs
- · Six independent SPST relay outputs
- · Six yellow indicator LEDs signal when the relay is energized



WARNING: Not To Be Used for Personnel Protection

Never use this product as a sensing device for personnel protection. Doing so could lead to serious injury or death. This product does NOT include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

Specifications

Input Configuration

6 PNP sourcing inputs

Input Voltage/Current

18 to 26V dc, 25 mA each

Output Configuration

6 relays, single pole single throw (25 millisecond response time)

Relay Output Rating

Maximum Switch Voltage: 130V ac or 30V dc

Switching Current: 0.1 to 5.0 amps Mechanical Life: 10 million operations

Electrical Relay Life at Maximum Load: 100,000 opera-

tions

Environmental Rating

IP55

P/N 144560 Rev 0

Connectors

Inputs/outputs terminal block wire gauge 12 to 28 AWG

Output Cable Gland

Jacket diameter: 5 to 9 mm

Operating Temperature

-20° to 50°C

Construction

Molded re-inforced thermoplastic polyester housing with polycarbonate cover

Indicators

6 yellow LEDs to indicate when respective relay is energized


Certifications


Pending

5/27/2011



Wiring and Dimensions

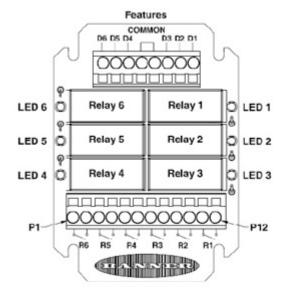


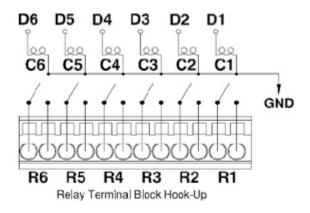


Nomenclature:

D1: Discrete Input 1 C1: Coil for Re ay 1 R1: Relay 1

P1: Pin 1

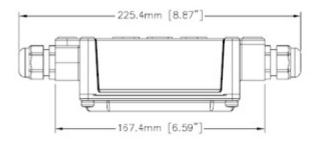

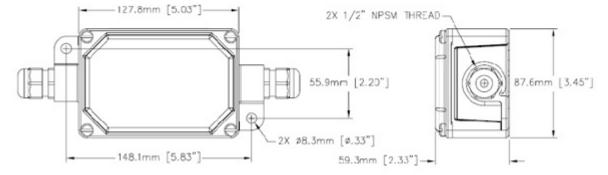

Warnings

The manufacturer does not take responsibility for the violation of any warning listed in this document.

Make no modifications to this product. Any modifications to this product not expressly approved by Banner Engineering could void the user's authority to operate the product. Contact the Factory for more information.

All specifications published in this document are subject to change. Banner reserves the right to modify the specifications of products without notice. Banner Engineering reserves the right to update or change documentation at any time. For the most recent version of any documentation, refer to our website: www.bannerengineering.com. © 2006-2010 Banner Engineering Corp. All rights reserved.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned

to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (IN-CLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement, IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPEN-SES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WAR-RANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.

Contact Us

For more information: Contact your local Banner representative or Banner Corporate Offices around the world.

Banner Corporate Headquarters Banner Engineering Corp. 9714 Tenth Ave. North Mpls., MN 55441 Tel: 763-544-3164 www.bannerengineering.com sensors@bannerengineering.com

Asia — China **Banner Engineering China** Shanghai Rep Office Rm. G/H/I, 28th Flr. Cross Region Plaza No. 899, Lingling Road Shanghai 200030 CHINA Tel: 86-21-54894500, Fax: 86-21-54894511 www.bannerengineering.com.cn sensors@bannerengineering.com.cn

Europe Park Lane Culliganlaan 2F Diegem B-1831 **BELGIUM** Tel: 32-2 456 07 80, Fax: 32-2 456 07 89 www.bannereurope.com mail@bannereurope.com

Asia — Taiwan **Banner Engineering Taiwan** 8F-2, No. 308 Section 1, Neihu Road Taipei 114 Tel: 886-2-8751-9966, Fax: 886-2-8751-2966 www.bannerengineering.com.tw info@bannerengineering.com.tw

Latin America Banner Engineering Europe Contact Banner Engineering Corp. (US) or e-mail: Mexico: mexico@bannerengineering.com Brazil: brasil@bannerengineering.com

> **Banner Engineering Japan** Cent-Urban Building 305 3-23-15, Nishi-Nakajima Yodogawa-Ku, Osaka 532-0011 JAPAN Tel: 81-6-6309-0411, Fax: 81-6-6309-0416 www.bannerengineering.co.jp mail@bannerengineering.co.jp

Asia — Japan

Asia — India **Banner Engineering India** Pune Head Quarters Office No. 1001 Sai Capital Opp. ICC Senapati Bapat Road Pune 411016 INDIA Tel: 91-20-66405624, Fax: 91-20-66405623 www.bannerengineering.co.in india@bannerengineering.com