

SureCross DX81H Battery Supply Module for the DX99



Delivers and manages dc voltage from one 3.6V dc lithium primary battery for the DX99 battery-powered devices

Features



- Wireless solution for powering a DX99 FlexPower™ Node and sensor device in Class I, Division 1, Groups A, B, C, D; Zone 0, Group IIC environments
- Unique power management system to run the FlexPower Node and a device through switched power outputs
- Replaceable 3.6V dc Lithium "D" cell battery
- IP67 sealed enclosure

FlexPower systems allow for a true wireless solution as the Node can be powered by battery power (3.6 to 5.5V dc). Battery life is application specific. Contact Banner Engineering's application engineers for a battery life calculation for your specific application.

For additional information, the most recent version of all documentation, and a complete list of accessories, refer to Banner Engineering's website, www.bannerengineering.com/surecross.

Models

Model	Power	Batteries	Cable
DX81H	3.6V dc battery	One 3.6V Lithium "D" Cell	5-pin Euro pigtail QD



WARNING: Not To Be Used for Personnel Protection

Never use this product as a sensing device for personnel protection. Doing so could lead to serious injury or death. This product does NOT include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.



Wiring Diagrams

5-pin Euro-Style Hookup for DX81H




Only FlexPower™ DX99 devices may be powered from this supply.



Wire No.	Wire Color	Description
3	Blue	dc common (GND)
5	Gray	3.6V dc

Do not apply more than 5.5V dc to the gray wire.


DX81 and DX81H Dimensions

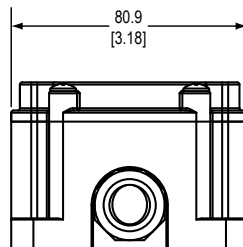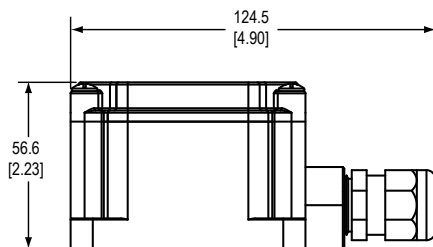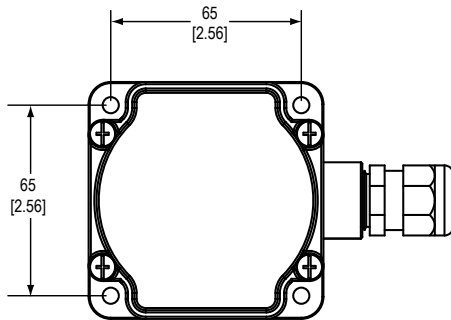

DX81 and DX81H FlexPower Module Battery Replacement

For outside or high humidity environments, conductive grease may be applied to the battery terminals to prevent moisture and corrosion buildup.

To replace the lithium "D" cell battery in the DX81 FlexPower™ battery kit, follow these steps.

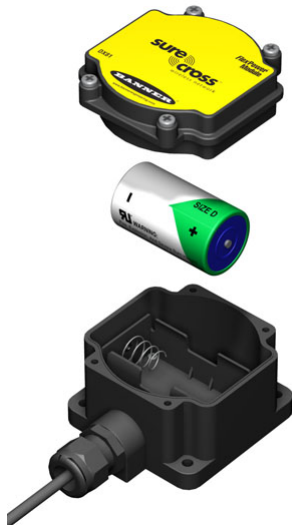

1. Unplug the battery device from the SureCross device it powers.
2. Remove the four screws mounting the battery pack face plate to the body and remove the face plate.
3. Remove the discharged battery and replace with a new battery. Only use a 3.6V lithium battery from Xeno, model number XL-205F.
4. Verify the battery's positive and negative terminals align to the positive and negative terminals of the battery holder mounted within the case. Caution: There is a risk of explosion if the battery is replaced incorrectly.
5. After replacing the battery, allow up to 60 seconds for the device to power up.

When removing the battery, press the battery towards the negative terminal to compress the spring. Pry up on the battery's positive end to remove from the battery holder. Properly dispose of your used battery according to local regulations by taking it to a hazardous waste collection site, an e-waste disposal center, or any other facility qualified to accept lithium batteries.

As with all batteries, these are a fire, explosion, and severe burn hazard. Do not burn or expose them to high temperatures. Do not recharge, crush, disassemble, or expose the contents to water.

Replacement battery model number: BWA-BATT-001. For pricing and availability, contact Banner Engineering.

Battery Replacement Warnings



Warning: Explosions may result in death or serious injury. Do not remove the instrument cover or open the wiring housing in explosive atmospheres when power and communications are on. Remove the battery-powered device from the hazardous location before opening the cover and replacing the battery.

Warning: The replacement battery MUST be a Banner approved battery, model number BWA-BATT-001. Use of a different battery will VOID the intrinsic safety rating of this device and may result in an explosion!

Warning: When replacing the battery, the negative end of the battery holder is the side with the spring terminal. This side is marked with a minus (-) sign.

Warning: Do not attempt to recharge the battery. These batteries are not rechargeable. Recharging may cause serious injury to personnel or damage the equipment. Replace only with factory recommended batteries.

Specifications

General

Estimated Battery Life

19,000 mA·hours

Housing

Polycarbonate

Weight: 0.26 kg (0.57 lbs)

Mounting: #10 or M5 (M5 hardware included)

Max. Tightening Torque: 0.56 N·m (5 in·lbf)

Wiring Access

One 1/2-inch NPT with 5-pin Euro-style 150mm pigtail QD

Environmental

Environmental

Rating: IEC IP67; NEMA 6; (See UL section below for any applicable UL specifications)

Shock and Vibration

IEC 68-2-6 and IEC 68-2-7

Shock: 30g, 11 millisecond half sine wave, 18 shocks

Operating Temperature: -40 to +70° C
 Operating Humidity: 95% max. relative (non-condensing)
 Radiated Immunity: 10 V/m, 80-2700 MHz
 (EN61000-6-2)


Vibration: 0.5 mm p-p, 10 to 60 Hz

Refer to the SureCross™ DX80 Wireless I/O Network product manual, Banner p/n 132607, for installation and waterproofing instructions. Operating the devices at the maximum operating conditions for extended periods can shorten the life of the device.

Certification

DX99 Polycarbonate Housings

CSA: Class I, Division 1, Groups A, B, C, D (Ex ia IIC / AEx ia IIC T4) Certificate: CSA 2008243 

LCIE/ATEX: Zone 0 (Group IIC), Temperature Class T4 (II 1 G / Ex ia IIC T4) Certificate: LCIE 08 ATEX 6098 X 
 Notes: Special Conditions for Safe Use imposed by Intrinsic Safety Certificate LCIE 08 ATEX 6098 X: Ambient temperature range is -40°C to +70°C. SureCross™ DX99 FlexPower devices can only be connected to Intrinsically Safe certified equipment or simple apparatus as defined by EN 60079-11. All connected equipment must comply with the Entity Parameters (Safety Parameters) listed in the Control Drawings document 141513. The device must only use a lithium battery manufactured by XENO, type XL-205F.

Warnings

The manufacturer does not take responsibility for the violation of any warning listed in this document.

Make no modifications to this product. Any modifications to this product not expressly approved by Banner Engineering could void the user's authority to operate the product. Contact the Factory for more information.

All specifications published in this document are subject to change. Banner reserves the right to modify the specifications of products without notice. Banner Engineering reserves the right to update or change documentation at any time. For the most recent version of any documentation, refer to our website: www.bannerengineering.com. © 2006-2010 Banner Engineering Corp. All rights reserved.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.

Contact Us

For more information: Contact your local Banner representative or Banner Corporate Offices around the world.

Banner Corporate Headquarters
Banner Engineering Corp.
9714 Tenth Ave. North
Mpls., MN 55441
Tel: 763-544-3164
www.bannerengineering.com
sensors@bannerengineering.com

Asia — China
Banner Engineering China
Shanghai Rep Office
Rm. G/H/I, 28th Flr.
Cross Region Plaza
No. 899, Lingling Road
Shanghai 200030 CHINA
Tel: 86-21-54894500, Fax:
86-21-54894511
www.bannerengineering.com.cn
sensors@bannerengineering.com.cn

Europe
Banner Engineering Europe
Park Lane
Culliganlaan 2F
Diegem B-1831
BELGIUM
Tel: 32-2 456 07 80, Fax:
32-2 456 07 89
www.bannereurope.com
mail@bannereurope.com

Asia — Taiwan
Banner Engineering Taiwan
8F-2, No. 308
Section 1, Neihu Road
Taipei 114
Tel: 886-2-8751-9966, Fax:
886-2-8751-2966
www.bannerengineering.com.tw
info@bannerengineering.com.tw

Latin America
Contact Banner Engineering
Corp. (US) or e-mail:
Mexico: mexico@bannerengineering.com
Brazil: brasil@bannerengineering.com

Asia — Japan
Banner Engineering Japan
Cent-Urban Building 305
3-23-15, Nishi-Nakajima
Yodogawa-Ku, Osaka
532-0011 JAPAN
Tel: 81-6-6309-0411, Fax:
81-6-6309-0416
www.bannerengineering.co.jp
mail@bannerengineering.co.jp

Asia — India
Banner Engineering India
Pune Head Quarters
Office No. 1001
Sai Capital Opp. ICC
Senapati Bapat Road
Pune 411016 INDIA
Tel: 91-20-66405624, Fax:
91-20-66405623
www.bannerengineering.co.in
india@bannerengineering.com